



| No. | Name of Part |
|-----|--------------------------|
| 1 | Slide |
| 2 | Front Sight |
| 3 | Front Sight Screw |
| 4 | Cylinder Screw |
| 5 | Rear Sight |
| 6 | Firing Pin Stop Screw |
| 7 | Piston |
| 8 | Ring Head |
| 9 | Ring |
| 10 | Ring Head Screw |
| 11 | Piston Part |
| 12 | Piston Part Screw |
| 13 | Cylinder Return Spring |
| 14 | Rear Sight Screw |
| 15 | Cylinder |
| 16 | Cylinder Valve Spring |
| 17 | Cylinder Valve |
| 18 | Cylinder Valve Stopper |
| 19 | Outer Barrel |
| 20 | Inner Barrel |
| 21 | Rubber Chamber |
| 22 | Chamber Cover (Right) |
| 23 | Chamber Cover (Left) |
| 24 | O-Ring |
| 25 | Adjust Dial |
| 26 | Adjust Lever |
| 27 | Chamber Cover Screw |
| 28 | Recoil Plug |
| 29 | Recoil Spring |
| 30 | Recoil Spring Guide A |
| 31 | Recoil Spring Guide B |
| 32 | Chassis |
| 33 | Chassis Screw |
| 34 | Safety (Right) |
| 35 | Slide Stop |
| 36 | Disconnecter |
| 37 | Sear |
| 38 | Hammer |
| 39 | Hammer Pin |
| 40 | Hammer Strut |
| 41 | Chassis Cover Part |
| 42 | Knocker Spring |
| 43 | Chassis Cover Part Screw |
| 44 | Knocker |
| 45 | Knocker Lock |
| 46 | Knocker Lock Spring |

| No. | Name of Part |
|-----|----------------------------|
| 47 | Safety (Left) |
| 48 | Slide Stop Plunger |
| 49 | Slide Stop Plunger Spring |
| 50 | Safety Plunger |
| 51 | Grip Safety |
| 52 | Chassis Cover Screw |
| 53 | Grip |
| 54 | Grip Screw A |
| 55 | Grip Screw B |
| 56 | Magazine Catch Lock |
| 57 | Magazine Catch Spring |
| 58 | Magazine Catch |
| 59 | Trigger Bar |
| 60 | Trigger |
| 61 | Trigger Pin |
| 62 | Trigger adjust Screw |
| 63 | Sear Spring |
| 64 | Housing Pin |
| 65 | Hammer Spring Plunger |
| 66 | Hammer Spring |
| 67 | Hammer Spring Housing |
| 68 | Plunger Stopper |
| 69 | BB Lip Pin |
| 70 | Magazine Gasket |
| 71 | BB Lip Pin |
| 72 | Valve |
| 73 | Magazine Case |
| 74 | O-Ring |
| 75 | Magazine spring Retainer |
| 76 | Magazine Base |
| 77 | Filling Valve |
| 78 | O-Ring |
| 79 | Washer |
| 80 | Magazine Base Screw |
| 81 | Follower |
| 82 | Follower Spring |
| 83 | Magazine Bottom |
| 84 | Chassis Cover |
| 85 | Recoil Spring Guide Buffer |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |